


<b>Anziehvorschrift für Zylinderkopf</b>	<b>711.671</b>	
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>PSA</b>
		Das Original

Schraubenkopf / Head shape  
Tête de vis / Cabeza de tornillo


Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



152.480

M

M10x110-1.5 M12x110-1.5

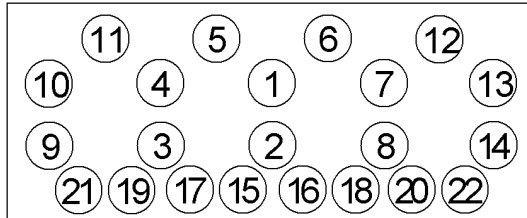

- Anziehen/ \* M 12 (POS. 1-14):  
Tightening/ 50 Nm  
Serrage/ \* M 10 (POS. 15-22):  
Apriete 35 Nm
- POS. 1-22:  
120°±5°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot. DK5ATE, DJ5, DJ5T  
2446 ccm Diesel/Turbo-Diesel

605, Boxer

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*711.671\***