




IMPORTANT PRODUCT DESIGN INFORMATION

The dowel pin holes are designed to be offset. Rotate the cover assembly to align with the flywheel dowel pins.

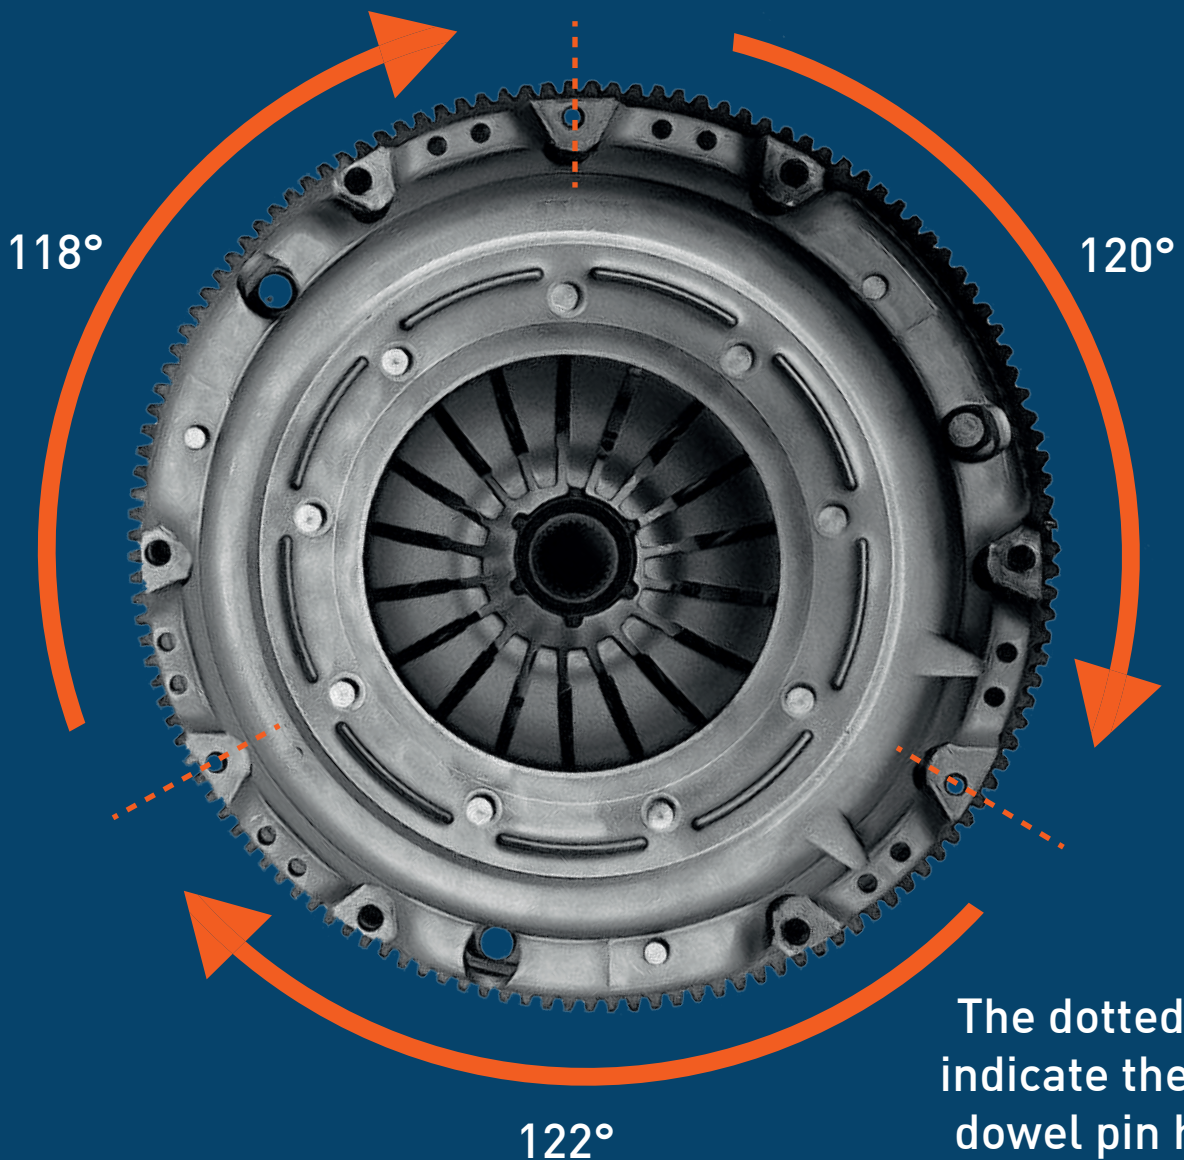

The dotted lines indicate the three dowel pin holes.



Need more support?

For comprehensive advice from one of our clutch experts, email TGLSales@tibbettsgroup.com